

VS
SASSOON



Wonderful
WAVES
SHINE LUSTRE COLLECTION

INSTRUCTION BOOKLET

Please ensure you read & follow the styling instructions
before using for the first time.

VSLE39A

**NEVER
UNDERESTIMATE
THE POWER OF
A WOMAN WITH
GREAT HAIR**

SEE AMAZING, BE AMAZING

For all our style tutorials
check us out online
vssassoon.com.au





IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully & keep for future reference.

DANGER:

- Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water - keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use given the proximity of water hazards are present even when the appliance is switched off.
- Do not immerse the appliance into water or other liquids.
- If this appliance falls into water, unplug it immediately - **DO NOT REACH INTO THE WATER.**
- This appliance is a burn hazard. Keep appliance out of reach from young children particularly during use & cool down.
- Always place the appliance on a stand if one has been provided, or on a heat-resistant, stable flat surface.



WARNING: Before & During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.

- Do not place the appliance on any heat sensitive surfaces or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch where the air openings may be blocked - keep the air openings free of lint & other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face & neck.
- Do not use extension cord with this appliance.

WARNING: Storage & Maintenance

Always unplug the appliance immediately after it is recharged & before cleaning or maintenance.

Do not wrap the power cord tightly around the appliance when storing. This causes undue strain on the power cord & protective guard. Over time, this will damage the power cord resulting in an unsafe condition to the user.

- If the power cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Do not leave the appliance unattended when plugged in or switched on.
 - Always allow the appliance to cool down before storing away in a location where children cannot reach it.
 - Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
 - Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
 - If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair
-

Customer Service if you have any issues operating your appliance.

CAUTION:


- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience & knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use & as described in this instruction booklet. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom - ask your installer for advice.

Wonderful WAVES

SHINE LUSTRE COLLECTION

AMAZING CHOICE!

Create your own hair envy with this big 32mm triple barrel waver. Personalise to suit your hair type with the 3 hair-friendly heat settings, while the smoothing ceramic & aloe vera infused barrels help reduce frizz & add shine, for healthy & vibrant hair. Simply clamp the hair between the barrels & release for bouncy, lush & even waves.

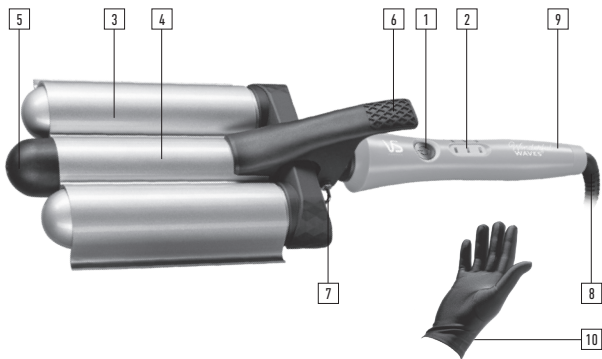

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. On/off & temperature adjustment button 2. LED indicator lights - 160°C, 180°C, 200°C 3. 32mm triple barrels 4. Shine Lustre Technology | <ol style="list-style-type: none"> 5. Easy hold cool tip 6. Comfortable thumb rest 7. Built-in kick stand 8. Swivel power cord 9. Safety auto shut off 10. Universal heat protection glove |
|--|--|

SHINE LUSTRE TECHNOLOGY

Shine Lustre Technology combines an infusion of aloe vera oil & ceramic coating on the triple barrels to help reduce frizz & add shine, for healthy & vibrant hair.

Aloe vera acts as a conditioner to help rejuvenate hair's nutrients to reduce frizz, while ceramic helps your hair look healthy & shiny by maintaining even heat during the styling process.

HOW TO USE THE

Wonderful
WAVES
SHINE LUSTRE COLLECTION

IMPORTANT:

Hair that has been heavily bleached or chemically treated should only use the low-heat setting on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

CAUTION:

This is a high-heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into contact with the skin (e.g. scalp, neck ears, face, etc.) as the barrel / plate can, particularly if held too close, cause discomfort or even burn.

Keep appliance out of reach from young children particularly during use & cool down. Never leave this appliance in a place where young children could access it.

BEFORE USING

- Remove all packaging & point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation).

OPERATING INSTRUCTIONS

Wash, condition & dry your hair as normal.

Ensure your hair is combed through & tangle-free.

1. Plug your waver into a 230-240V- suitable power outlet, fold out the built-in kick stand & place on a heat protective, flat level surface.
2. Press & hold the (⏻) button for approx. 2 seconds to turn your waver on. At this time it will start to automatically heat to the default temperature setting of 160°C.
3. To adjust the heat settings, press the (⏻) button & scroll through to the desired temperature. The LED light will illuminate & flash to indicate the heat setting that's selected. The LED light will continue to flash until the desired temperature has been reached.

NB: At this stage the universal heat glove should be worn on the hand which will hold the hair in the waver.

4. Divide your hair into equal sections, between 3cm - 5cm wide, depending on your hair type, thickness & length. The number of sections will depend on how much hair you have & how defined you'd like your waves to be.
5. Place the section of hair between the top plate/barrel & bottom barrels & hold the hair firmly for approx 5-10 seconds, depending on your hair type, thickness & length, as well as how defined you'd like the waves to be. Take care not to let the appliance touch the scalp.
6. Release the section of hair & re-position the waver so that the next wave section to be styled falls in line with the previous wave section already styled.
7. Always work from the root to the tips of your hair. Continue this action down the entire hair section, towards the ends of the hair.

TIPS:

- For a more modern style, keep the ends of the hair section straight & not waved.
 - Once the hair has cooled, separate the waves using fingers for a softer look or brush out using a comb.
8. Repeat this through all hair sections.
9. After use, turn your waver off by pressing & holding the (⏻) button again for approx. 2 seconds.

Allow waver to cool before storing.

HOW TO STYLE WITH

Wonderful
WAVES
SHINE LUSTRE COLLECTION

EXPERT TIP

Set your style with a spritz of light hold hair spray, for extra hold if needed.

SEE AMAZING, BE AMAZING

For all our style tutorials
check us out online
vssassoon.com.au



CLEANING & MAINTENANCE

Your styler is designed for household use & is virtually maintenance free. If cleaning becomes necessary, disconnect the styler from the power source, if charging & ensure the styler is cool before wiping with a damp cloth. If any abnormal conditions occur contact Conair Customer Service.

LIMITED 2 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice.

Attach a copy of your purchase receipt and store in a safe place.

To make a warranty claim, call Customer Service on the phone number or email below. Or you can return the defective product back to the place it was purchased where it will be replaced (see point 12 of paragraph C. Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer name & location
3. Product name/model number
4. Confirm you have your purchase receipt
5. Detail the problem with your product

Conair Australia Pty Ltd

PO Box 146
Terrey Hills
NSW 2084

Customer Service

Australia
1800 650 263
email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159
Pakuranga, Auckland
New Zealand 2140

Customer Service

New Zealand
0800 266 247
email: aus_info@conair.com

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The guarantees under the Australian Consumer Law (“ACL”) are provided in sections 51 to 59 inclusive of the ACL (“Statutory Guarantees”) and the remedies are provided in sections 259 to 266 inclusive of the ACL (Statutory Remedies).

B. VS SASSOON EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty (“Warranty”) commences from the date of purchase and continues for a period of 24 months (“Warranty Period”) after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser (“Purchaser”) of the VS Sassoon product that is the subject of this warranty (“Product”) that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion (“Warranty”). In this Warranty “Conair” means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia and Conair New Zealand Ltd in relation to Products purchased in New Zealand.
2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C. CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.
2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if - a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.
4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, becomes the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.
8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.
9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.

10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.
11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.
12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card and the purchase receipt as proof of purchase so please make sure you keep both this card and your receipt on hand for the duration of the warranty period.

SHINE LUSTRE WONDERFUL WAVES



Certain trademarks used under license from The Procter & Gamble Company or its affiliates.

©2022 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US:

For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

CUSTOMER SERVICE:

Australia: 1800 650 263
New Zealand: 0800 266 247

vssassoon.com.au

VSLE39A

SEE
AMAZING
BE
AMAZING